


PART Number SHL 6528

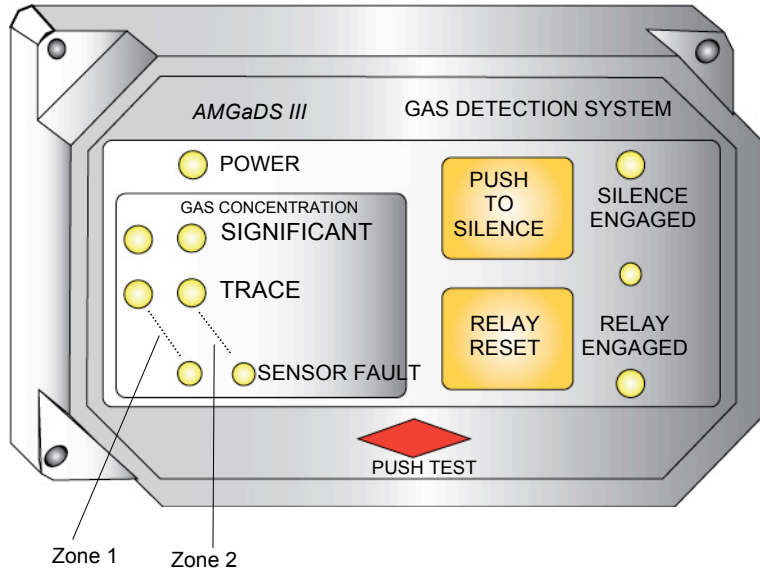

Indicator Definitions

Power Green = System Is On

Sensor Alarms

Trace = Small Gas Concentration Detected -20-30% LEL

Significant = Dangerous Gas Concentration Detected- 50-60% LEL
Suspend Vehicle Operation Immediately

Sensor Fault Indicators:

Off = Unit Functional

On = Sensor or Wiring Fault Detected. Service System

Relay Reset or Shutdown Reset Button = Resets Relay After Gas Alarm Has Cleared

Relay Indicator = Indicates Relay Is Engaged

On = Relay Is Engaged

Off = Relay Is In Normal Position - Not Engaged

Test Button = Tests LED's Electronic Panel (6528) and Electrical Circuits

Alarm Silence Button = Push To Silence Audible Alarm

Alarm Silenced Indicator = On Indicates Audible Alarm Has Been Silenced

WARNING: DO NOT ATTEMPT TO REMOVE THE DISPLAY PANEL COVER. DOING SO WILL VOID ALL WARRANTIES.

CAUTION: No Power On/Off switch is provided for this system. Gas detection system must be connected to correct power source, be powered at all times, have proper fuse inline, and not powered off with ignition, bypass electrical switch, etc. If power is on and left unattended for extended periods of time, vehicle battery power may be diminished.